

IMPORTANT – READ FIRST

Do Not Store Plugged in to Bose Headphones!


Store Harmony in the left side pocket of the UFlyMike case.

Do not disconnect or connect while headphones are on your head!

To avoid damaging your Harmony or headphones, care must be taken when connecting and disconnecting the Harmony from the Headphone.

To Connect: Grasp the Harmony at the feather logo and gently push straight in (push until you feel/hear it snap into place). The Harmony will fit tightly and will not fall out when installed correctly.

To Disconnect: Grasp the Harmony at the feather logo and gently pull straight out.

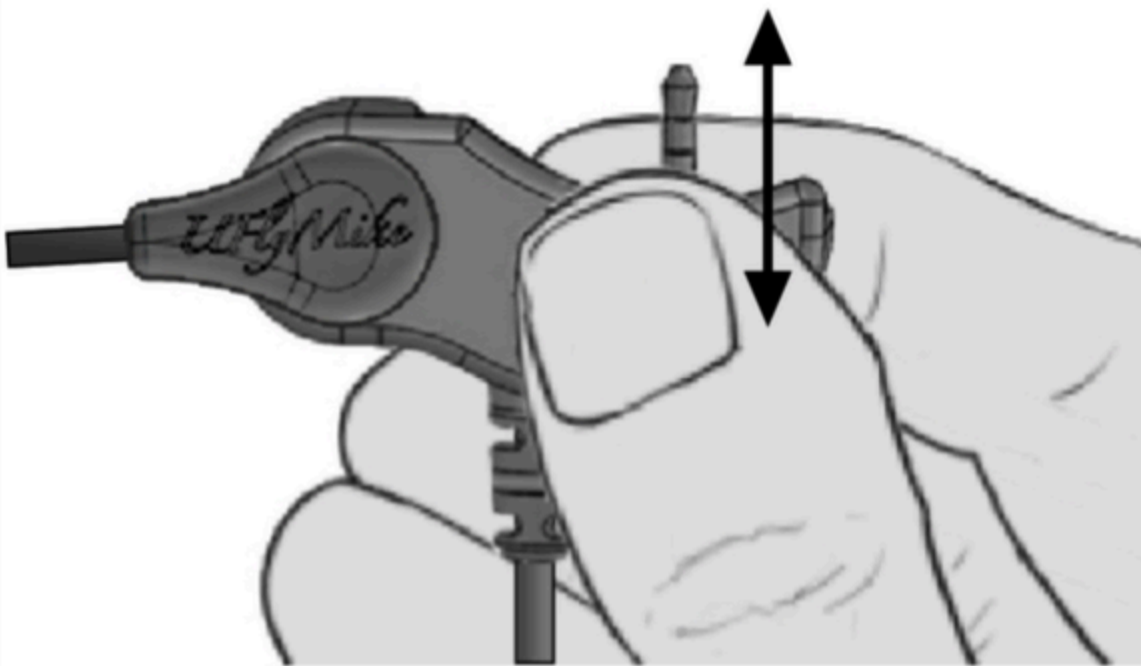

**DISCONNECTING IMPROPERLY CAN BEND OR
BREAK THE PLUG. REPAIRS OF DAMAGED
PLUGS DUE TO USER ERROR ARE NOT
COVERED UNDER WARRANTY.**